

1. OHMIC value of sensor

传感器电阻值

2. Sensor replacement guidelines


传感器更换指引



Tx(°C)	Tx(°F)	R (KΩ)	Tx(°C)	Tx(°F)	R (KΩ)	Tx(°C)	Tx(°F)	R (KΩ)	Tx(°C)	Tx(°F)	R (KΩ)	Tx(°C)	Tx(°F)	R (KΩ)
-30	-22.00	33.81	-15	5.00	14.310	0	32.00	6.495	15	59.00	3.141	30	86.00	1.617
-29	-20.20	31.85	-14	6.80	13.550	1	33.80	6.175	16	60.80	2.999	31	87.80	1.550
-28	-18.40	30.01	-13	8.60	12.830	2	35.60	5.873	17	62.60	2.865	32	89.60	1.486
-27	-16.60	28.29	-12	10.40	12.160	3	37.40	5.587	18	64.40	2.737	33	91.40	1.426
-26	-14.80	26.68	-11	12.20	11.520	4	39.20	5.315	19	66.20	2.616	34	93.20	1.368
-25	-13.00	25.17	-10	14.00	10.920	5	41.00	5.060	20	68.00	2.501	35	95.00	1.312
-24	-11.20	23.76	-9	15.80	10.350	6	42.80	4.818	21	69.80	2.391	36	96.80	1.259
-23	-9.40	22.43	-8	17.60	9.820	7	44.60	4.589	22	71.60	2.287	37	98.60	1.209
-22	-7.60	21.18	-7	19.40	9.316	8	46.40	4.372	23	73.40	2.188	38	100.40	1.161
-21	-5.80	20.01	-6	21.20	8.841	9	48.20	4.167	24	75.20	2.094	39	102.20	1.115
-20	-4.00	18.90	-5	23.00	8.392	10	50.00	3.972	25	77.00	2.005	40	104.00	1.071
-19	-2.20	17.87	-4	24.80	7.968	11	51.80	3.788	26	78.80	1.919	41	105.80	1.029
-18	-0.40	16.90	-3	26.60	7.568	12	53.60	3.613	27	80.60	1.838	42	107.60	0.989
-17	1.40	15.98	-2	28.40	7.190	13	55.40	3.447	28	82.40	1.761	43	109.40	0.951
-16	3.20	15.12	-1	30.20	6.833	14	57.20	3.290	29	84.20	1.687	44	111.20	0.914

Spare parts code : **11201007000795**

Its technical specifications apply to all MIDEA refrigerators.




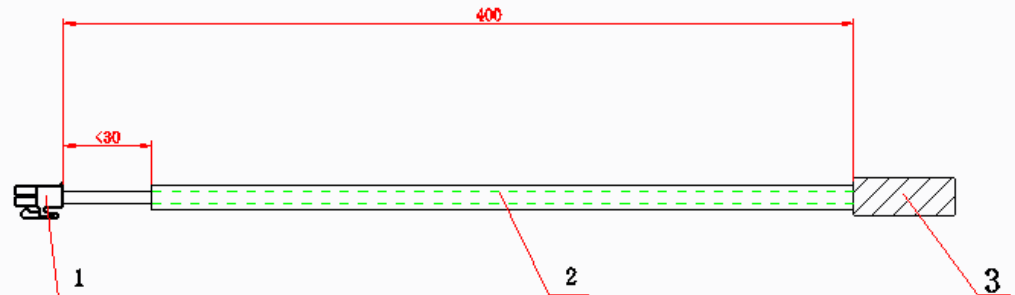


1. OHMIC value of sensor 传感器电阻值

2. Sensor replacement guidelines 传感器更换指引



Process :

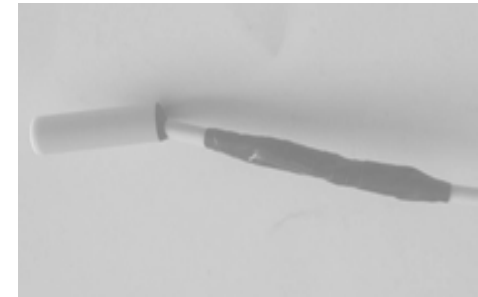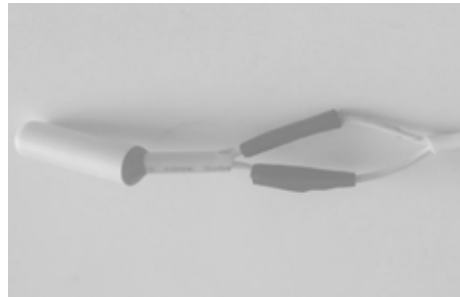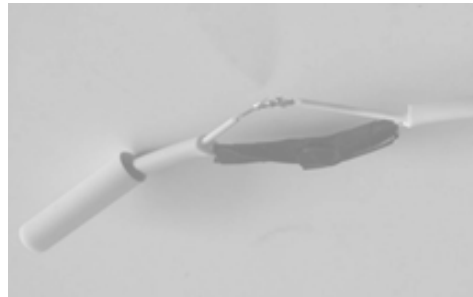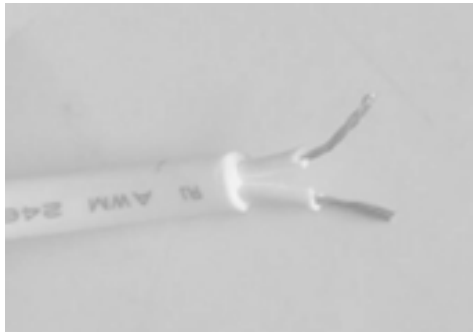

Tooling
Equipment
Material



(Spare parts code : 11201007000795)